
Assembly Instructions and First Time Use Crutch Height Adjustment

Height Adjustment is done using a telescoping tube with aluminium clips or push pin.

 
- Loosen the clamping screws (A) by turning to the left.
- Press the push pin (B) in the hole, or pull out the adjusting clip (C).
- Move the aluminium tube to the desired position.
- Allow the push pin to click back into the hole, or allow the adjusting clip to click in position.
- Firmly tighten the clamping screw (A) by turning to the right (tightening the screw prevents noise from occurring during use).

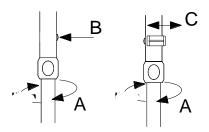

Adjusting the Arm Cuff

Only for models equipped with adjustable cuffs!

- Press the spring pin (F) into the hole.
- Move the arm cuff (G) to the desired position.
- Allow the spring pins (F) to click back through the hole.



"Magic-Twin" storing system

- Simply push them together and stand!
- Optimise the storing position. No more accidents.



Adjusting the Rotary Handle

(only for models: "Comfort" and "Safe-In-Anatom")

- Loosen sleeve nut (H) in handle with an SW 6 wrench.
- Turn the handle to the desired position.
- Tighten sleeve nut (H).

Care

 
To care for the crutches, use a mild commercially available cleanser and disinfection agent. After cleaning, wipe them with clean water and then wipe dry with a cloth.

Do not use an abrasive scouring agent or cleaner (read the product instructions!) that contain aggressive solvents (acids, benzene, thinners, alcohol). Do not use stiff cleaning brushes, as these will damage the plastic surfaces or cause deposits to build up on the plastic parts and other materials.

When using a disinfectant, be sure to abide by the manufacturer's instructions during use!!

Maintenance

A worn or damaged crutch end-cap (wear-part) must be replaced immediately. Pull off the crutch end-cap from the end of the tube. Push on a new end-cap until it hits the end of the tube. Be sure the right size and design are used, see table.



Bent or damaged crutches may not be used because they no longer provide the necessary stability. Because of the risk of breakage, bent crutches may not be repaired by straightening. In the event a crutch is damaged, then have it repaired by an authorized sales and service dealer

Use only original REBOTEC spare parts.

Have your crutch inspected by a qualified specialist at least every 6 months.

Disposal

Products that are no longer useable must be properly disposed of according to national and local regulations for environmental protection and material recycling. They must be kept separated from regular household refuse. Contact your local disposal company or environmental authorities.

Warranty

We provide a warranty period of **12 months** for the crutches described herein. Wear and damage resulting from product misuse are excluded. Also wear parts are excluded.



Safety advisories



- Read the User Instructions before first-time use in order to avoid damages through improper use or other hazards.
- Be sure the maximum allowable weight for the crutch is not exceeded!
- Before each use, carefully check the crutch for damage. If damage is detected, then do not use the crutch. Contact your authorised dealer for a complete inspection!
- When using the handle, firmly grab it with your complete hand.
- For your safety, have someone accompany you so that they can provide support and help prevent you from falling down.
- Check the crutch end-tip on a regular basis for wear or damage. Replace if damaged or worn.
- Hold the crutches as vertically as possible on the surface.
 Do not hold the crutch too far out to the side, away from your body, or too far in front of you in the direction of travel.
- Under no circumstances may the crutch be used for foreign purposes. Use it only to assist your walking and not for example as an aid for getting up, as a lever for moving objects.
- No mechanical alterations may be made to the crutch without written permission (product liability!).
- Do not hang any objects on the crutch (handbags, shopping bags, etc.).
- Do not expose crutches to direct sunlight for long time periods (in front of windows, or next to heaters, or under the rear window of a car). Heat can lead to an alteration of the material properties and shorten the crutches' lifetime.
- If unused for an extended time period, have the crutch inspected by a specialist before re-using.
- Never use the crutch on snow or icy surfaces without first attaching the ice claws.
- Be very careful when walking on moist tiles, carpeting or parquet floors – danger of slipping!
- Never clean the grip handle or the crutch end-cap with an oily substance - danger of slipping!
- Be careful when walking on uneven surfaces and if there are holes in the ground because the crutch may slip away or sink unexpectedly!
- Be careful when using the crutch on loose gravel surfaces, sand or leaves because there is far less stability!

Control Cont					_	_								_			_	_		_			_
Name	max. body weight / kg	100	120	130	130	130	130	130	130	130	130	130	130	130	130	130	130	130	100	100	100	100	
Name	mm / əzis qit bnə	17	19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	19	11	17	2١	11	
Name	support angle / a Grad	22	22	25	25	25	25	25	25	25	23	23	23	23	23	23	23	23	23	23	23	23	ģ
Name		24,0	24,0	24,0	24,0	24,0	24,0	24,0	24,0	24,0	22,0-24,5	22,0-24,5	22,0-24,5	22,0-24,5	22,0-24,5	22,0-24,5	22,0-24,5	22,0-24,5	16,02-20,5	16,02-20,5	16,02-20,5	16,02-20,5	C=behind-r
Name ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extra long MAGIC-TWN-extra long MAGIC-SOFT MAGIC-SOFT MAGIC-SOFT COMBI-SOFT COMFORT COMFORT COMFORT COMFORT COMFORT SAFE-IN-SOFT SAFE		72,0-95,0	72,0-95,0	75,0-98,0	75,0-98,0	75,0-98,0	85,0-108,0	75,0-98,0	75,0-98,0	75,0-98,0	0,76-0,57	0,76-0,37	75,0-97,0	75,0-97,0	75,0-97,0	75,0-97,0	75,0-97,0	75,0-97,0	0,76-0,57	75,0-97,0	50,0-77,5	50,0-77,5	om-white,
Name ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extra long MAGIC-TWN-extra long MAGIC-SOFT MAGIC-SOFT MAGIC-SOFT COMBI-SOFT COMFORT COMFORT COMFORT COMFORT COMFORT SAFE-IN-SOFT SAFE	Reflector*	A	٨	٨	۲	٨	٨	٨	٨	A	ပ	၁	၁	B,C	B,C	၁	၁	ပ	A	А	٧	Α	d, B=v
Name ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extra long MAGIC-TWN-extra long MAGIC-SOFT MAGIC-SOFT MAGIC-SOFT COMBI-SOFT COMFORT COMFORT COMFORT COMFORT COMFORT SAFE-IN-SOFT SAFE	Tumable handle												×					×					rn-re
Name ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extra long MAGIC-TWN-extra long MAGIC-SOFT MAGIC-SOFT MAGIC-SOFT COMBI-SOFT COMFORT COMFORT COMFORT COMFORT COMFORT SAFE-IN-SOFT SAFE	"SimotsnA" elbnsH									×		×	×				×	×					N=VO
Name ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extra long MAGIC-TWN-extra long MAGIC-SOFT MAGIC-SOFT MAGIC-SOFT COMBI-SOFT COMFORT COMFORT COMFORT COMFORT COMFORT SAFE-IN-SOFT SAFE	Handle "Ergonomic"	×	×	×	×	×	×	×	×		×			×	×	×			×	×	×	×	tor: /
Name ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extra long MAGIC-TWN-extra long MAGIC-SOFT MAGIC-SOFT MAGIC-SOFT COMBI-SOFT COMFORT COMFORT COMFORT COMFORT COMFORT SAFE-IN-SOFT SAFE	Closed arm cuff														×	×	×	×		×		×	eflec
Name ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extra long MAGIC-TWN-extra long MAGIC-SOFT MAGIC-SOFT MAGIC-SOFT COMBI-SOFT COMFORT COMFORT COMFORT COMFORT COMFORT SAFE-IN-SOFT SAFE	Adjustment arm cuff										×	×	×	×	×	×	×	×	×	×	×	×	* *
Name ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extra long MAGIC-TWN-extra long MAGIC-SOFT MAGIC-SOFT MAGIC-SOFT COMBI-SOFT COMFORT COMFORT COMFORT COMFORT COMFORT SAFE-IN-SOFT SAFE	1-piece arm cuff	×	×	×	×	×	×	×	×	×													dren
Name ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extra long MAGIC-TWN-extra long MAGIC-SOFT MAGIC-SOFT MAGIC-SOFT COMBI-SOFT COMFORT COMFORT COMFORT COMFORT COMFORT SAFE-IN-SOFT SAFE	Storage system			×	×	×	×	×	×	×													Chil
Name ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extra long MAGIC-TWN-extra long MAGIC-SOFT MAGIC-SOFT MAGIC-SOFT COMBI-SOFT COMFORT COMFORT COMFORT COMFORT COMFORT SAFE-IN-SOFT SAFE	Clamping system				×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×	es, 3:
Name ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extra long MAGIC-TWN-extra long MAGIC-SOFT MAGIC-SOFT MAGIC-SOFT COMBI-SOFT COMFORT COMFORT COMFORT COMFORT COMFORT SAFE-IN-SOFT SAFE	niq dauq fnəmtaulbA		×		×			×	×	×	×												Ladi
Name ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extra long MAGIC-TWN-extra long MAGIC-SOFT MAGIC-SOFT MAGIC-SOFT COMBI-SOFT COMFORT COMFORT COMFORT COMFORT COMFORT SAFE-IN-SOFT SAFE	Adjustment clip	×		×		×	×					×	×	×	×	×	×	×	×	×	X	×	and
Name ECO 100 ECO 100 ECO 120 MAGIC-TWNN MAGIC-TWNN MAGIC-TWNN-extr MAGIC-SOFT MAGIC-SOFT COMFICT COMFICT COMFICT COMFICT SAFE-IN-SOFT SAFE-IN-SOFT SAFE-IN-SOFT SAFE-IN-SOFT COMFICT SAFE-IN-SOFT SAFE-I	.oNhA	100.20	100.22	101	102	103	104	301	105.48	701	601	011	112	115	116	711	811	119	120	12010	122.	12210	2=Teens
α σ Group							ra long			ATOM							NATOM		LIGHT-LINE		FUN-KIDS	SAFE-IN-KIDS	1=Adults,
	Group									_									G	7	ç	၇	

Re-Use Product liability applies only to the first use of the product described in this User Instructions. If the product is to be given further again after the first use, then it must be checked over by an authorised dealer or by the manufacturer. This inspection should prevent an improper use through possible or directly visible damages. We defer to the conditions of the German Medical Products Act (MPG) and the German MPBetreibV (Medical Products Use Regulation). Be sure to check your national and local regulations.

Lifetime

The expected lifetime of the product described in these User Instructions, when properly used according to the instructions

for use, safety regulations and maintenance requirements, and when properly cared is **12 months**. Beyond this time period, the product may be used further only when it is in a proper and safe condition. Maintenance should be done at least every 6 months. Heavy use and harsh conditions by the patient on the crutch may necessitate even more frequent maintenance

REBOTEC

REBOTEC® Rehabilitationsmittel GmbH

PO Box Q541 Queen Victoria Building NSW 1230



rebotec.com.au info@rebotec.com.au





BA-No.: 02.01.001/2016-12

User Instructions

Elbow Crutches



Intended proper use

The crutch is designed for persons with impaired walking ability. It serves to provide more security when walking. This crutch can be used inside and outside. The crutch may be pushed together (telescoping) to make it more compact for easier transport. Always be sure to observe all the safety advisories and the maximum allowable body weight when using the crutch!

Have yourself advised by a qualified specialist or careprovider on how to properly use the crutch and for its proper adjustment for optimum function!

Advisory!

You can see this User Instructions pamphlet and the flyer "Information for Patients" (No.: 02.01.067) at our website at www.rebotec.de . It is possible to print out the information and read it as needed.